

Original ecotrash® Removing Top of Compactor

Purpose: Removing and reinstalling top instructions. Use when servicing the compactor. **For**

More Info Visit: https://www.youtube.com/watch?v=8_D4mNEx3EM&t=39s




Step 1) Key open front door (shown with top arrow) and then unplug power to machine. (If power has been unplugged prior to opening, use triangle key found on the back left of the machine to unlock door (shown with bottom arrow.)



Step 2) Using a 3/8" socket with a 6" extension remove the two bolts holding down compactor top on the inside of the machine. Slide top towards back of the machine, remove and set aside.



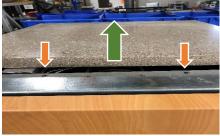



Step 3) When reinstalling top, line up the bracket attached to the top and place it into the guides in the frame. Slide the top towards the front of the compactor and line up bolt holes on inside of compactor shown in photos from step above. Tighten bolts.

Step 4) Lock door and plug-in power to the machine.