



## Original ecotrash<sup>®</sup> Replacing Compactor Skins/LCD

**Purpose:** Removal and and installation of door and side skins.



**Step 1)** Remove top and set aside (see IS0002).



**Step 2)** Using a T-25 torx wrench remove the three screws located on each side of the front door skin. Pull top of skin forward and lift up and off of bottom tabs.

**Step 3)** Carefully remove the LCD by removing cable which will be hot glued to the bezel. Remove the four phillips head screws from LCD bezel and remove LCD. Set front door skin off to the side for later disposal.



**Step 4)** Remove three T-25 torx screws from front side and one from bottom left side of both side panels and two T-25 torx screws from back side top of side panels. Remove both rear bumpers using a 5/16 (8mm) nut driver or socket. You are now ready to remove the sides. **Note:** You may find 4 phillips head screws in the front side and 4 in the back of side skins. Remove these and discard.



**Step 5)** First install new side skins by reversing previous instructions. Then reinstall LCD into new door Skin. Now install new door skin by placing the bottom of the door skin into tabs that are located at the bottom of the frame and slide top into place. Install door skin screws and reinstall compactor top. Restore power and test LCD function.