Original EcoTrash® Replacing Power Supply

Purpose: Replacement of 350/450 WATT Power Supply

 



Step 1) Remove Top of machine. Refer to Top Removal Instructions.

Step 2) Remove power to machine by unplugging power cord.



Step 3) Remove high voltage and low voltage wires from power supply. Then remove the 4 phillips screws holding the power supply to the machine. Right angle screw driver attachment is very helpful.



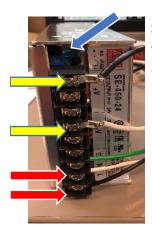

Step 5) Reapply power to the machine. Check output voltage. Verify that it is set at 24V +/- .5V. Use adjustment screw to set voltage correctly. Verify that the power supply input voltage is set to 110V on

Arrow Key:

Blue - DC Voltage Adjustment Screw

Yellow - 24V DC Terminals Red - 120V AC Terminals