

Original ecotrash® Compactor Unloading Instructions


Purpose: For easy unloading of your new compactor follow these simple instructions!



Step 1) Congratulations and thank you for obtaining your Original ecotrash compactor! You may have an additional trash bin located on top of the pallet. Please carefully inspect all pieces for shipping damage before unboxing.

Step 2) Cut and discard the banding. Remove the plywood top and set aside for later. Lift-off the foam and removed the cardboard sleeve. At this point, locate the sides of the pallet with the two screws in the wooden machine base. Using a #2 phillips bit, remove the four screws and the 2"x4"x24" front retaining board.



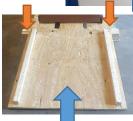

Step 3) Use the top as a ramp: On the side of the pallet near where you removed the front retaining board, locate the two alignment holes. Lay the plywood top on the pallet edge as a ramp ensuring that the rails are up and holes on pallet and top line up (as shown). Place two of the screws that you removed from front retaining board into the holes in the top and the pallet to act as retaining pins, so the ramp does not slide off the pallet.



Step 4) Carefully guide the compactor down the ramp toward the floor. At this point you may need an additional person to assist. (We recommend staying on the downward side of the machine, as shown, because it is top heavy.)

Step 5) You are now ready to intall and use your new machine! Please refer to the **Installation Packet** located on the trash door of your compactor and follow the simple set up instructions! **Visit:** https://www.youtube.com/watch?v=2NXTy9cGv_0

ISO001 Rev C

For questions or service call 1-612-230-2209